


AUSDOM PC Monitor Software Installation Guide


First, the software installation

1. Make sure the pump body installation is complete, the PUMP port is correctly accessed, the USB port is correctly accessed.
2. Make sure that the antivirus software "deactivated" or in the process of installation, if there is an antivirus reminder, choose to allow the installation.
3. Unzip the file "AUSDOM PC Monitor.zip".
4. Double-click to install "setup.exe".


(1) The software installation interface is shown below, click "Next".

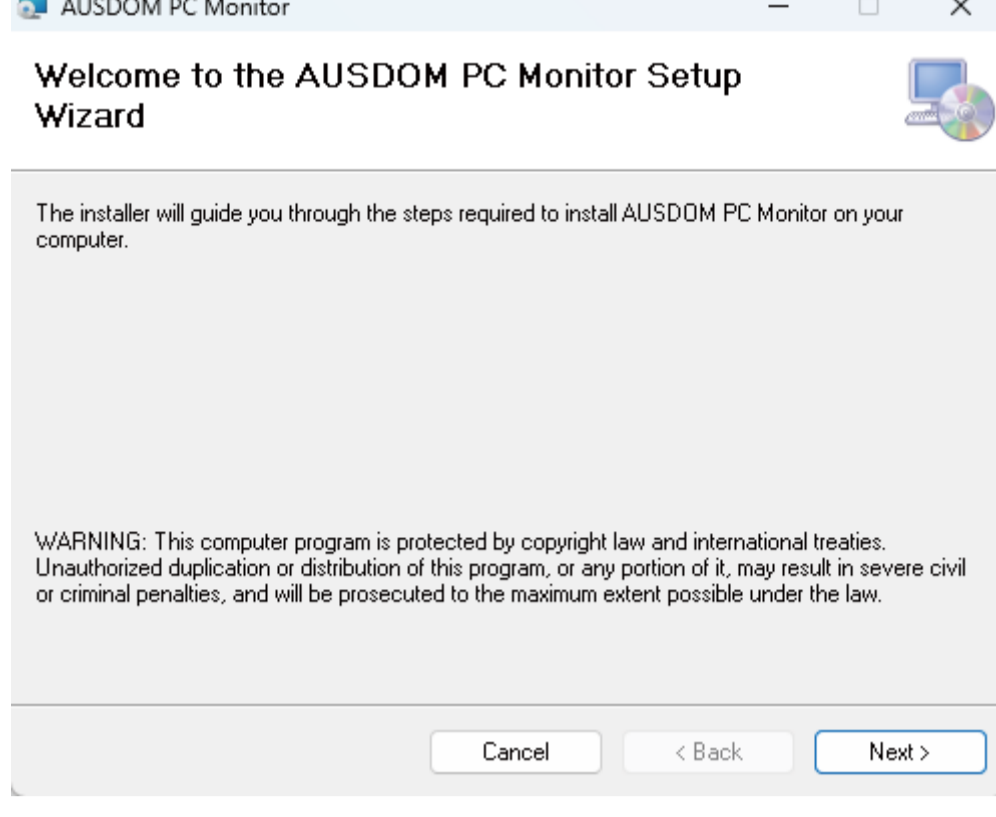


(2) Browse and select the installation path, or click "Next".

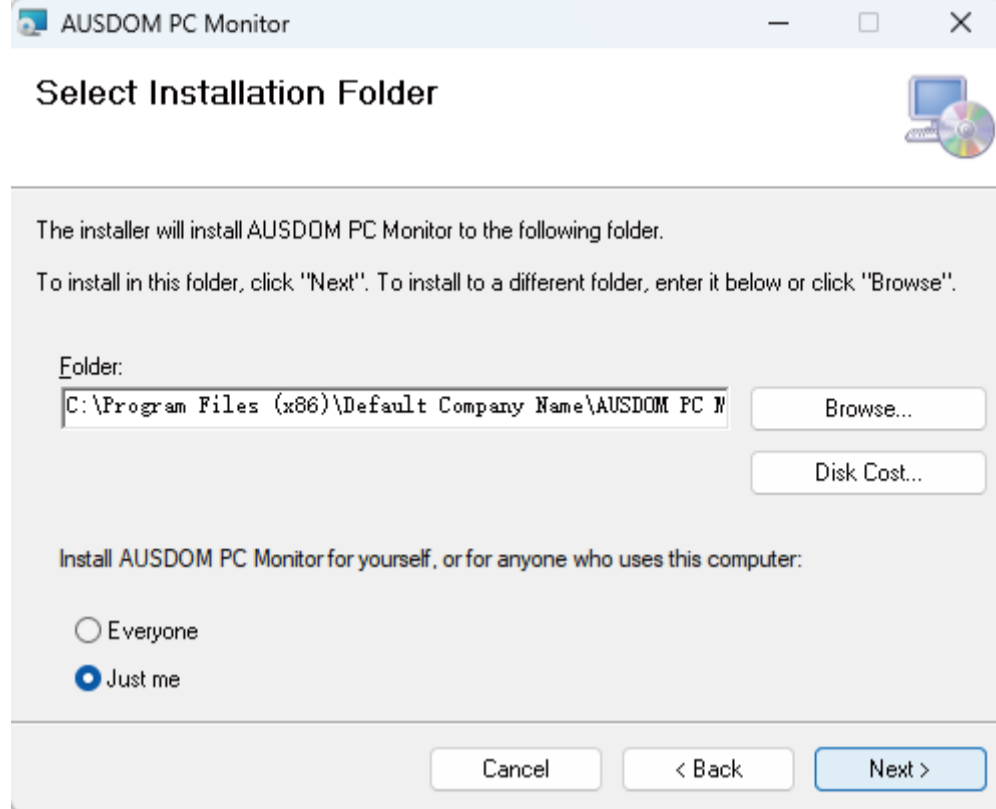

(3) Click Next again to confirm the installation interface.

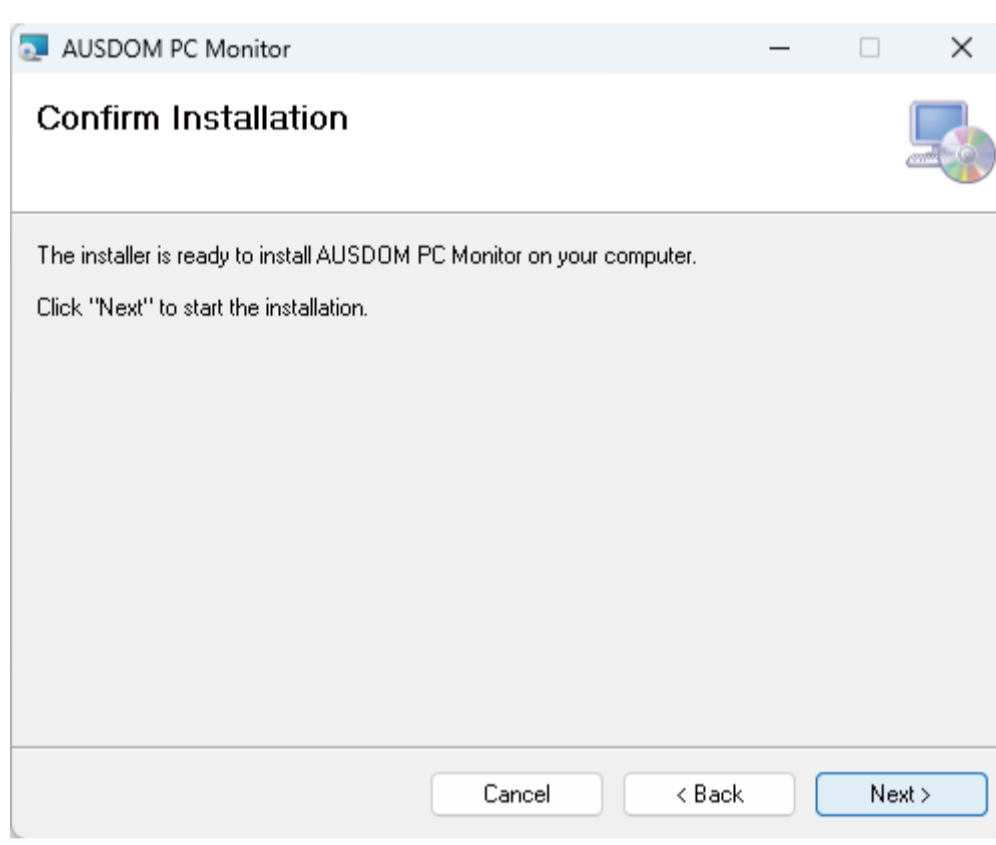

(4) and then click Next to perform the installation, and then wait a few seconds to half a minute, the installation is complete.

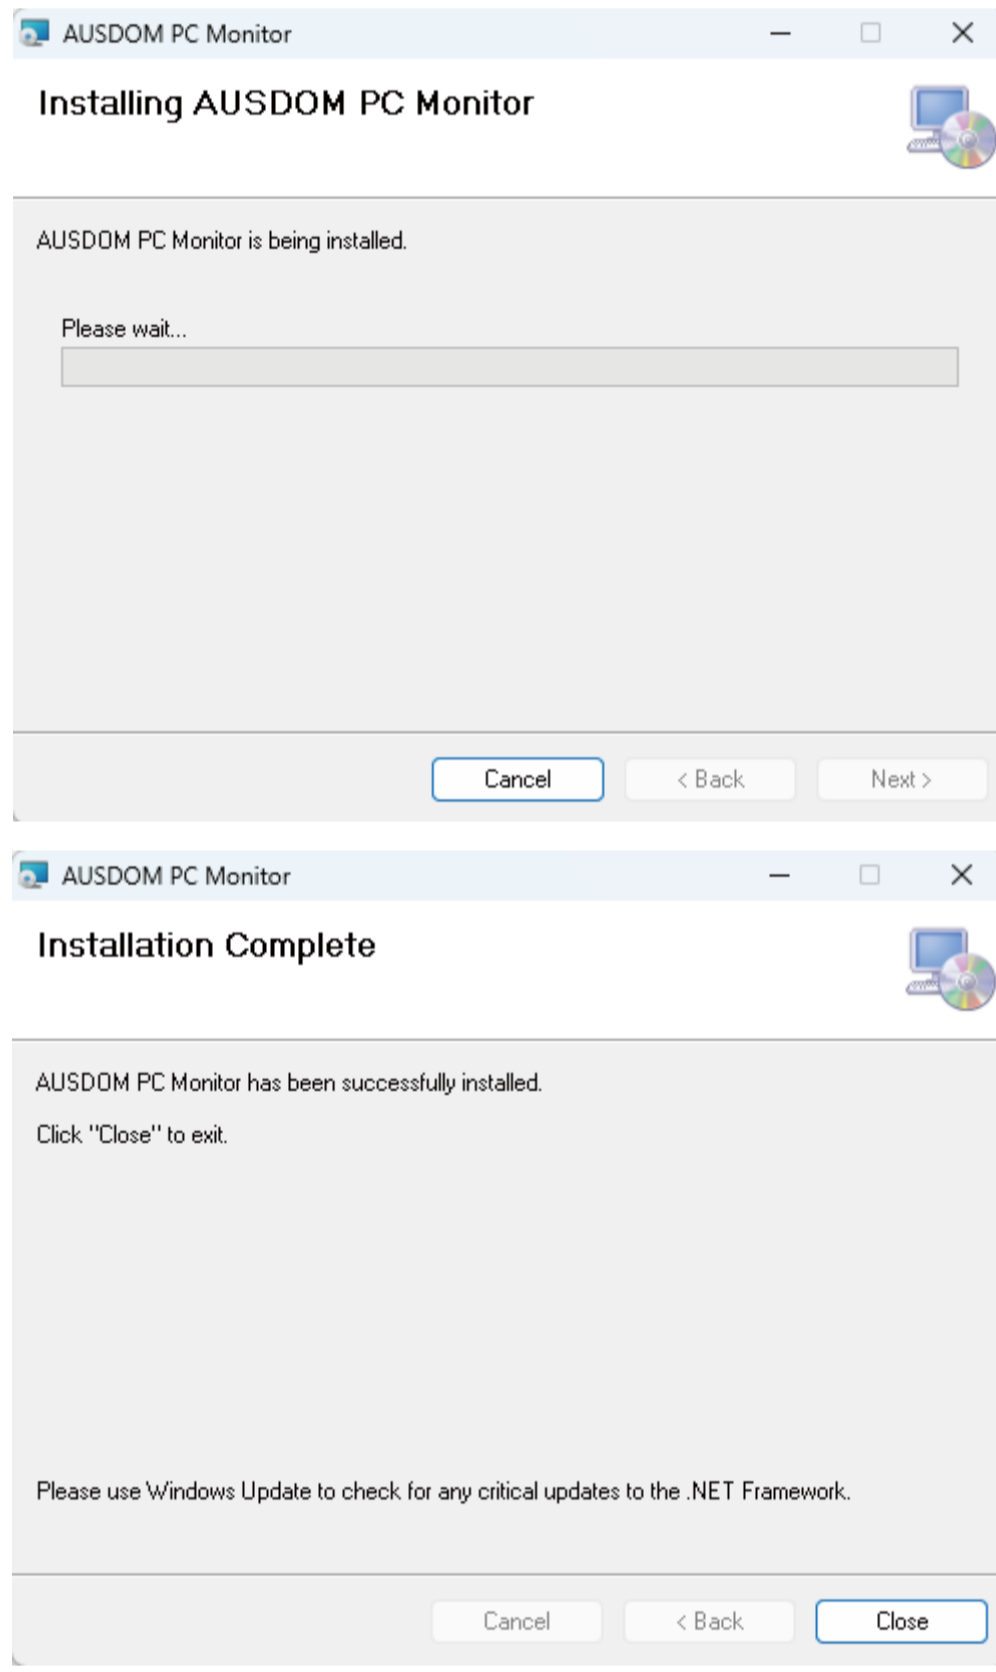

(5) After successful installation, click Close, the desktop will display a new shortcut AUSDOM PC Monitor.

Second, the software interface

Double-click to open the software; the first time the software loads the default is to shrink to the lower right corner of the interface tray icon, double-click the icon to open the main interface.

The following picture shows the double-click to open the interface as follows

AUSDOM CPU Liquid Cooler Unconnected Status:



AUSDOM CPU Liquid Cooler Connected Status:

